



AEROTOP M & L Air- HMI Quick Start Guide

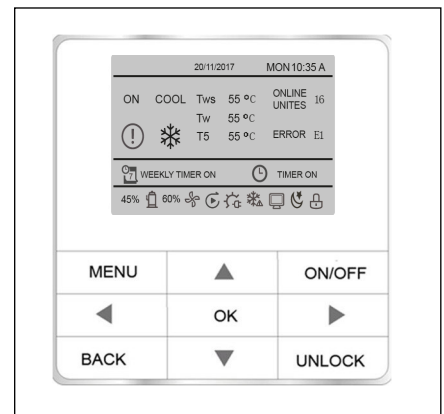

Setting

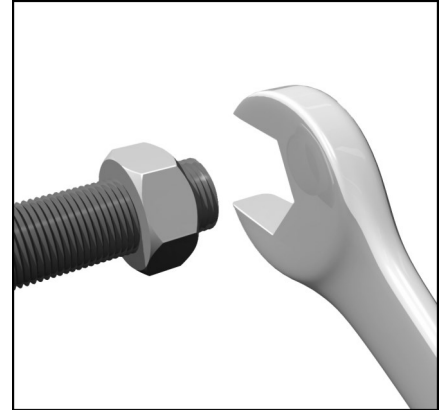

Unlock the display by pressing the "UNLOCK" button



Press "MENU" and go to the "MODE" menu to select the operating mode to set, press OK to confirm.



Press "◀▶" to select the mode to change.
Press "▲▼" to adjust the set point temperature in heating.
Press OK to confirm.



Press "◀▶" to select a different mode to change (for example "cooling").

Setting



Press "▲▼" to adjust the set point temperature.
Press OK to confirm.



To set the domestic hot water set point, the function must first be activated.
Press "MENU"



Press "▲▼" to select the "USER MENU"
Press OK to confirm.



Press "▲▼" to select the "DHW SWITCH"
Press OK to confirm.

Setting



Then go to "DHW" and press "◀▶" to activate the domestic hot water function



Therefore it is possible to set the priority of the domestic hot water production.



Then go to "DHW FIRST" and press "◀▶" to activate the domestic hot water priority



When finished
Press OK to confirm.
Now you can go back to the "MODE" menu and set the set point for the domestic hot water.

Setting



Press "MENU" and go to the "MODE" menu to select the operating mode to set, press OK to confirm.



Press "◀▶" to select the mode to change.
Press "▲▼" to adjust the set point temperature in heating.
Press OK to confirm.



Press "▲▼" to adjust the set point temperature in heating.
Press OK to confirm.



If there is a need to manage the heat pump by the "Remote Interface" or via ModBus, the function must be activated.
Go to "SERVICE MENU",
Press OK to confirm.
Go to "SETTING ADDRESS"
Press OK to confirm.
Go to "MODBUS ENABLE" and press "◀▶" to enable the ModBus communication.
Press OK to confirm.

elco

Service:

UK Importer
ELCO HEATING SOLUTION LIMITED
3 Juniper West, Fenton Way
Basildon, SS15 6SJ

ELCO GmbH
Hohenzollernstraße 31
D - 72379 Hechingen

www.elco.net